
### CHAPTER 51

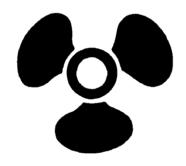

# MACHINIST'S MATE (MM)

NAVPERS 18068-51G CH-64

Updated: October 2015

# TABLE OF CONTENTS MACHINIST'S MATE (AUXILIARY) (MME)

SCOPE OF RATING	MM-3(E)
GENERAL INFORMATION	MM-4(E)
AUXILIARY EQUIPMENT TECHNICIAN	MM-5(E)
MECHANICAL MAINTENANCE	MM-5(E)
MECHANICAL SYSTEMS OPERATIONS	MM-7(E)
QUALITY ASSURANCE	MM-8(E)
AUXILIARY EQUIPMENT OPERATOR	MM-9(E)
MECHANICAL MAINTENANCE	MM-9(E)
MECHANICAL SYSTEMS OPERATIONS	MM-10(E)
QUALITY ASSURANCE	MM-10(E)
AUXILIARY EQUIPMENT MANAGER	MM-11(E)
MECHANICAL MAINTENANCE	MM-11(E)
MECHANICAL SYSTEMS OPERATIONS	MM-11(E)
QUALITY ASSURANCE	MM-11(E)

#### NAVY ENLISTED OCCUPATIONAL STANDARD

#### FOR

#### MACHINIST'S MATE (AUXILIARY) MM(E)




#### SCOPE OF RATING

<u>Machinist's Mates (Auxiliary) (MME)</u> operate, maintain, and repair (at the organizational and intermediate level) damage control equipment and systems, internal combustion diesel engines and diesel engine support systems, hydraulic systems, atmosphere control and oxygen-generating equipment, refrigeration systems, compressed air and gas systems, potable water system, seawater systems, and sanitary and plumbing systems.

This Occupational Standard is to be incorporated in Volume I, Part B, of the Manual of Navy Enlisted Manpower and Personnel Classifications and Occupational Standards (NAVPERS 18068F) in Chapter 51.

#### **GENERAL INFORMATION**

#### **CAREER PATTERN**

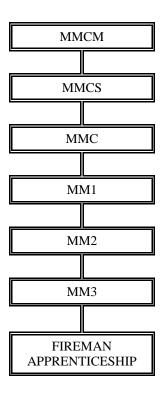

Normal path of advancement to Chief Warrant Officer and Limited Duty Officer categories can be found in OPNAVINST 1420.1.

For rating entry requirements, refer to MILPERSMAN 1306-618.

#### **SAFETY**

The observance of Operational Risk Management (ORM) and proper safety precautions in all areas is an integral part of each billet and the responsibility of every Sailor; therefore, it is a universal requirement for all ratings.

# Job Title **Auxiliary Equipment Technician**

Job Code 001519

Job FamilyNOCShort Title (30 Characters)Short Title (14 Characters)Installation, Maintenance, and RepairTBDAUXILIARY EQUIPMENT TECHNICIANAUX EQUIP TECH

Pay PlanCareer FieldOther Relationships and RulesEnlistedMMENEC's may include 42XX series

#### **Job Description**

Auxiliary Equipment Technicians perform organizational and intermediate maintenance as well as advanced systems operations of hydraulic power plants and hydraulic system components, emergency diesel engines, compressed gas systems (air, oxygen, hydrogen, and nitrogen), sanitation systems, seawater systems, freshwater systems, oxygen-generating equipment, atmosphere control equipment, and submarine salvage equipment (watertight hatches and doors) and supervise operations and maintenance performed by Auxiliary Equipment Operators.

DoD Relationship O\*NET Relationship

Group TitleDoD CodeOccupation TitleSOC CodeJob FamilyShipboard Propulsion165000Maintenance and Repair Workers,49-9071.00Installation, Maintenance and RepairGeneralRepair

**Abiliti**es **Skills** Equipment Maintenance Manual Dexterity Operation and Control Written Comprehension Operation Monitoring Multi-limb Coordination Reading Comprehension Problem Sensitivity Troubleshooting Deductive Reasoning Quality Control Analysis Control Precision Systems Evaluation Inductive Reasoning

Management of Material Resources

Monitoring

#### MECHANICAL MAINTENANCE

Paygrade	Task Type	Task Statements
E4	CORE	Lubricate components
E4	CORE	Maintain air system components
E4	CORE	Maintain atmosphere control equipment
E4	CORE	Maintain auxiliary drain systems
E4	CORE	Maintain damage control equipment
E4	CORE	Maintain demineralized water systems
E4	CORE	Maintain depth sensing systems
E5	CORE	Maintain diesel engine support systems
E5	CORE	Maintain diesel engines
E4	CORE	Maintain drain systems
E5	NON-CORE	Maintain dry deck shelter systems
E4	CORE	Maintain escape trunks
E4	CORE	Maintain fresh water cooling systems
E4	CORE	Maintain habitability systems
E4	CORE	Maintain hydraulic system components
E4	CORE	Maintain oxygen and nitrogen systems
E5	CORE	Maintain oxygen-generating equipment

E4	CORE	Maintain potable water system components
E4	CORE	Maintain refrigeration system components
E4	CORE	Maintain salvage components
E4	CORE	Maintain ship service hydraulic plants
E5	CORE	Maintain steering and diving control systems
E4	CORE	Maintain steering and diving hydraulic plants
E4	CORE	Maintain submarine lubrication system
E4	CORE	Maintain trim system components
E4	CORE	Maintain variable ballast system components
E4	CORE	Maintain ventilation system components
E4	CORE	Maintain watertight doors and hatches
E4	CORE	Perform corrective maintenance on air system components
E5	CORE	Perform corrective maintenance on atmosphere control equipment
E4	CORE	Perform corrective maintenance on auxiliary drain system components
E4	CORE	Perform corrective maintenance on damage control equipment
E4	CORE	Perform corrective maintenance on demineralized water system
E5	CORE	Perform corrective maintenance on depth sensing system
E5	CORE	Perform corrective maintenance on diesel engine and support systems
E4	CORE	Perform corrective maintenance on drain system components
E5	CORE	Perform corrective maintenance on dry deck shelter systems
E4	CORE	Perform corrective maintenance on escape trunks
E4	CORE	Perform corrective maintenance on fresh water cooling systems
E4	CORE	Perform corrective maintenance on habitability systems
E4	CORE	Perform corrective maintenance on hydraulic system components
E5	CORE	Perform corrective maintenance on main ballast tank vent components
E5	CORE	Perform corrective maintenance on oxygen and nitrogen systems
E5	CORE	Perform corrective maintenance on oxygen-generating equipment
E4	CORE	Perform corrective maintenance on potable water system
E4	CORE	Perform corrective maintenance on refrigeration systems
E4	CORE	Perform corrective maintenance on salvage components
E4	CORE	Perform corrective maintenance on shipboard pumps
E4	CORE	Perform corrective maintenance on shipboard valves
E5	CORE	Perform corrective maintenance on steering and diving control systems
E4	CORE	Perform corrective maintenance on submarine lubrication systems
E4	CORE	Perform corrective maintenance on trim systems
E4	CORE	Perform corrective maintenance on ventilation systems
E4	CORE	Perform corrective maintenance on water tight doors and hatches
E5	CORE	Perform preventive maintenance on air system components
E5	CORE	Perform preventive maintenance on atmosphere control equipment
E4	CORE	Perform preventive maintenance on auxiliary drain system components
E4	CORE	Perform preventive maintenance on damage control equipment

E4	CORE	Perform preventive maintenance on demineralized water system
E4	CORE	Perform preventive maintenance on depth sensing system
E4	CORE	Perform preventive maintenance on diesel engine and support systems
E4	CORE	Perform preventive maintenance on drain system components
E5	NON-CORE	Perform preventive maintenance on dry deck shelter systems
E5	CORE	Perform preventive maintenance on escape trunks
E4	CORE	Perform preventive maintenance on fresh water cooling systems
E4	CORE	Perform preventive maintenance on habitability systems
E4	CORE	Perform preventive maintenance on hydraulic system components
E5	CORE	Perform preventive maintenance on oxygen and nitrogen systems
E5	CORE	Perform preventive maintenance on oxygen-generating equipment
E4	CORE	Perform preventive maintenance on potable water system
E5	CORE	Perform preventive maintenance on refrigeration systems
E5	CORE	Perform preventive maintenance on salvage components
E4	CORE	Perform preventive maintenance on shipboard pumps
E4	CORE	Perform preventive maintenance on shipboard valves
E6	CORE	Perform preventive maintenance on steering and diving control systems
E4	CORE	Perform preventive maintenance on submarine lubrication systems
E4	CORE	Perform preventive maintenance on trim systems
E5	CORE	Perform preventive maintenance on variable ballast systems
E4	CORE	Perform preventive maintenance on ventilation systems
E5	CORE	Perform preventive maintenance on water tight doors and hatches
E7	CORE	Supervise diesel inspections

#### MECHANICAL SYSTEMS OPERATIONS

<u>Paygrade</u>	Task Type	Task Statements
E4	CORE	Adjust air system components
E4	CORE	Adjust hydraulic system components
E5	CORE	Adjust refrigeration system components
E5	CORE	Adjust steering and diving control systems
E4	CORE	Maintain shipboard pumps
E4	CORE	Operate air system components
E5	CORE	Operate atmosphere control equipment
E4	CORE	Operate auxiliary drain systems
E4	CORE	Operate depth sensing systems
E4	CORE	Operate diesel engines and support systems
E4	CORE	Operate drain systems
E5	NON-CORE	Operate dry deck shelter systems
E4	CORE	Operate external hydraulic plants
E4	CORE	Operate fresh water cooling systems
E4	CORE	Operate hydraulic system components
E4	CORE	Operate main ballast tank vent components

E4	CORE	Operate oxygen and nitrogen systems
E5	CORE	Operate oxygen-generating equipment
E4	CORE	Operate potable water systems
E4	CORE	Operate refrigeration systems
E4	CORE	Operate ships service hydraulic plants
E4	CORE	Operate steering and diving control systems
E4	CORE	Operate stern diving plants
E4	CORE	Operate submarine emergency life support systems
E4	CORE	Operate submarine habitability systems
E4	CORE	Operate submarine salvage systems
E4	CORE	Operate trim systems
E4	CORE	Operate ventilation systems

#### QUALITY ASSURANCE

<u>Paygrade</u>	<u> 1ask Type</u>	<u> 1 ask Statements</u>
E5	CORE	Perform Quality Assurance (QA) inspections

# **Job Title Auxiliary Equipment Operator**

Job Code 001524

Job FamilyNOCShort Title (30 Characters)Short Title (14 Characters)Installation, Maintenance, and RepairTBDAUXILIARY EQUIPMENT OPERATORAUX EQUIP OPER

**Job Description** 

Quality Control Analysis

Auxiliary Equipment Operators perform operations and basic preventive maintenance of hydraulic power plants and hydraulic system components, emergency diesel engines, compressed gas systems (air, oxygen, hydrogen, and nitrogen), sanitation systems, seawater systems, freshwater systems, submarine firefighting, and emergency dewatering and damage control equipment.

DoD Relationship O\*NET Relationship

Group TitleDoD CodeOccupation TitleSOC CodeJob FamilyShipboard Propulsion165000Maintenance and Repair Workers,49-9071.00Installation, Maintenance and RepairGeneralRepair

SkillsAbilitiesOperation and ControlManual DexterityOperation MonitoringDeductive ReasoningEquipment MaintenanceProblem SensitivityTroubleshootingWritten ComprehensionMonitoringControl Precision

Multi-limb Coordination
Information Ordering

#### MECHANICAL MAINTENANCE

<b>Paygrade</b>	Task Type	Task Statements
E4	CORE	Lubricate components
E4	CORE	Maintain ship service hydraulic plants
E4	CORE	Perform corrective maintenance on air system components
E5	CORE	Perform corrective maintenance on atmosphere control equipment
E4	CORE	Perform corrective maintenance on auxiliary drain system components
E4	CORE	Perform corrective maintenance on damage control equipment
E4	CORE	Perform corrective maintenance on demineralized water system
E5	CORE	Perform corrective maintenance on depth sensing system
E5	CORE	Perform corrective maintenance on diesel engine and support systems
E4	CORE	Perform corrective maintenance on drain system components
E5	CORE	Perform corrective maintenance on dry deck shelter systems
E4	CORE	Perform corrective maintenance on escape trunks
E4	CORE	Perform corrective maintenance on fresh water cooling systems
E4	CORE	Perform corrective maintenance on habitability systems
E4	CORE	Perform corrective maintenance on hydraulic system components
E5	CORE	Perform corrective maintenance on main ballast tank vent components
E5	CORE	Perform corrective maintenance on oxygen and nitrogen systems
E5	CORE	Perform corrective maintenance on oxygen-generating equipment
E4	CORE	Perform corrective maintenance on potable water system
E4	CORE	Perform corrective maintenance on refrigeration systems
E4	CORE	Perform corrective maintenance on salvage components

E5	CORE	Perform corrective maintenance on steering and diving control systems
E4	CORE	Perform corrective maintenance on submarine lubrication systems
E4	CORE	Perform corrective maintenance on trim systems
E4	CORE	Perform corrective maintenance on water tight doors and hatches

#### MECHANICAL SYSTEMS OPERATIONS

<u>Paygrade</u> E4	<u>Task Type</u> CORE	Task Statements Adjust air system components
		Adjust air system components
E4	CORE	Adjust hydraulic system components
E5	CORE	Adjust refrigeration system components
E5	CORE	Adjust steering and diving control systems
E4	CORE	Maintain shipboard pumps
E4	CORE	Operate air system components
E5	CORE	Operate atmosphere control equipment
E4	CORE	Operate auxiliary drain systems
E4	CORE	Operate depth sensing systems
E4	CORE	Operate diesel engines and support systems
E4	CORE	Operate drain systems
E5	NON-CORE	Operate dry deck shelter systems
E4	CORE	Operate external hydraulic plants
E4	CORE	Operate fresh water cooling systems
E4	CORE	Operate hydraulic system components
E4	CORE	Operate main ballast tank vent components
E4	CORE	Operate oxygen and nitrogen systems
E5	CORE	Operate oxygen-generating equipment
E4	CORE	Operate potable water systems
E4	CORE	Operate refrigeration systems
E4	CORE	Operate ships service hydraulic plants
E4	CORE	Operate steering and diving control systems
E4	CORE	Operate stern diving plants
E4	CORE	Operate submarine emergency life support systems
E4	CORE	Operate submarine habitability systems
E4	CORE	Operate submarine salvage systems
E4	CORE	Operate trim systems
E4	CORE	Operate ventilation systems

#### QUALITY ASSURANCE

<u>Paygrade</u>	Task Type	Task Statements
E4	CORE	Perform Quality Assurance (QA) maintenance

# Job Title Auxiliary Equipment Manager

Job Code 001532

Job FamilyNOCShort Title (30 Characters)Short Title (14 Characters)ProductionTBDAUXILIARY EQUIPMENT MANAGERAUX EQUIP MGR

Pay PlanCareer Field<br/>MMEOther Relationships and Rules<br/>NEC's may include 42XX series

#### **Job Description**

Auxiliary Equipment Managers manage auxiliary division operations, maintenance, and training of hydraulic power plants and hydraulic system components, emergency diesel engines, compressed gas systems (such as air, oxygen, hydrogen, and nitrogen), sanitation systems, seawater systems, freshwater systems, oxygen-generating equipment, atmosphere control equipment, and submarine salvage equipment such as watertight hatches and doors. They also train, mentor, and supervise the operations and maintenance performed by Auxiliary Equipment Technicians and Operators.

#### DoD Relationship O\*NET Relationship

Group TitleDoD CodeOccupation TitleSOC CodeJob FamilyShipboard Propulsion165000First-Line Supervisors of Managers, Mechanics, Installers, and49-1011.00Installation, Maintenance and Repair

Repairers

<u>Skills</u> <u>Abilities</u>

Management of Material ResourcesInductive ReasoningManagement of Personnel ResourcesOral ExpressionMonitoringDeductive ReasoningQuality Control AnalysisInformation Ordering

#### MECHANICAL MAINTENANCE

<b>Paygrade</b>	<u>Task Type</u>	<u>Task Statements</u>
E7	CORE	Supervise diesel engine corrective maintenance
E7	CORE	Supervise diesel inspections
E6	CORE	Supervise hydraulic corrective maintenance
E7	CORE	Supervise oxygen-generating plant corrective maintenance
E6	CORE	Supervise oxygen-generating plant operation
E7	CORE	Supervise steering and diving control system maintenance

#### MECHANICAL SYSTEMS OPERATIONS

<b>Paygrade</b>	Task Type	<u>Task Statements</u>
E7	CORE	Supervise diesel engine operations
E6	CORE	Supervise habitability and sanitation operations
E6	CORE	Supervise hydraulic system operations
E6	CORE	Supervise oxygen and nitrogen systems maintenance
E6	CORE	Supervise oxygen and nitrogen systems operations

#### **OUALITY ASSURANCE**

<u>Paygrade</u>	<u>Task Type</u>	<u>Task Statements</u>
E5	CORE	Develop Quality Assurance (QA) packages
E4	CORE	Perform Quality Assurance (QA) maintenance
E7	CORE	Review Quality Assurance (QA) packages